



## 1-Hour Fire Bead®

Fast, simple and cost-effective, Fire Bead is the new go-to standard for firestopping in wall joints. Fire Bead's  $\frac{1}{2}$ " gasket allows up to  $\frac{1}{4}$ " of building deflection with cutting-edge firestopping technology to halt the passage of smoke, fire and sound.

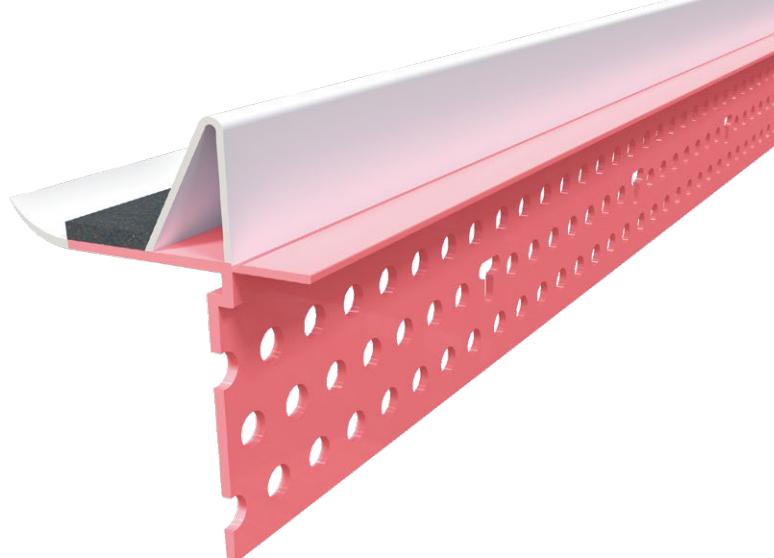

### Installation Guide

#### Technical Specs

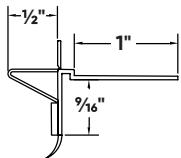

Scan Below for  
Installation Video



#### Before Installation:

Install drywall and leave a  $\frac{1}{2}$ " gap between ceiling/adjacent structure and drywall. Measure, cut and dry fit the bead.

#### Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

#### Step 2:

Pressure the bead into place while ensuring that the bubble gasket is touching the ceiling/adjacent structure and is slightly compressed. Do not over compress the bubble gasket.

#### Step 3:

Staple every 6"-8" using  $\frac{1}{2}$ " staples.

#### Step 4:

Finish with drywall compound. Remove tear-off strips prior to sanding.


#### Note:

There should be no gaps left in joints between pieces. Additional sealant may be used at butt joint to ensure seamless joints.


#### Step 1:



#### Step 2:

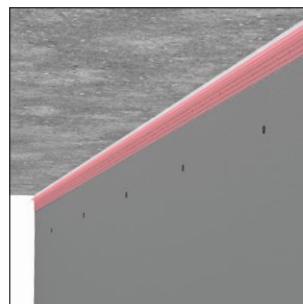

#### Step 3:

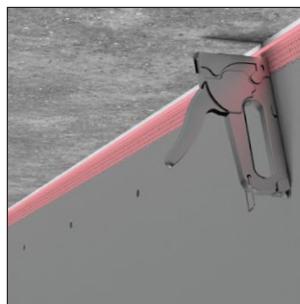

#### Step 4:

