



Fire Gasket® 0.5

Fire Gasket is the fastest firestopping solution for head-of-wall joints on the market, installing up to five times faster than traditional sealants and sprays. Fire Gasket is installed pre-drywall, and provides up to 0.5" of unencumbered movement.

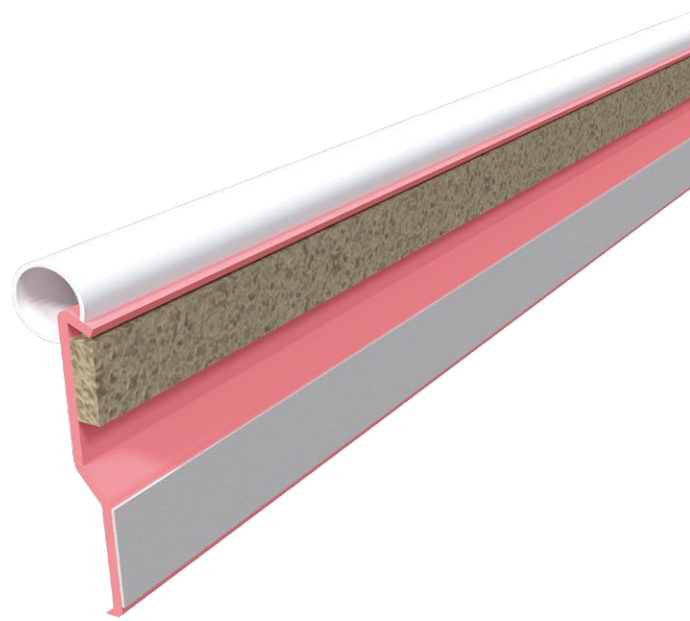

Installation Guide


Technical Specs

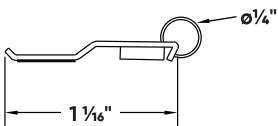


Scan Below for
Installation Video



Step 1:

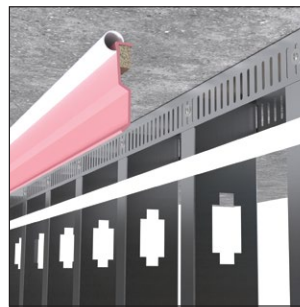

Step 2:

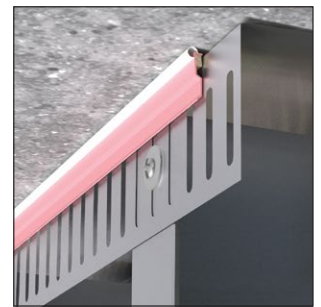

Before Installation:

Install Fire Gasket to the wall framing before hanging drywall. Measure, cut and dry fit the bead.

Step 1:

Remove backing on adhesive foam tape.

Step 2:

Compress the bubble gasket firmly against the adjoining structure. Pressure the product into place while adhering it to the framing.


Step 3:

Install drywall directly over Fire Gasket per the deflection requirement allowed by the required UL joint system reports.

Note:

- To keep the drywall gap consistent, use an appropriately sized spacer on top of drywall.
- If desired, finish top of drywall with L Bead or Tear Away L Bead.
- Fire Gasket can optionally be fastened to the framing using appropriate 1/2" screws through the adhesive foam on its lower leg.
- There should be no gaps left in joints between pieces. Additional sealant may be used at butt joint to ensure seamless joints.

Step 3:

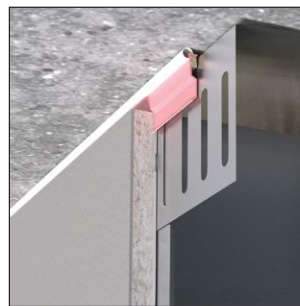

Note:

