


## Mud Set $\frac{3}{8}$ " Medium Bullnose Corner Bead

Mud Set Beads are the strongest and most impact-resistant corner solutions on the market, and this style offers all that durability in the form of a  $\frac{3}{8}$ " Bullnose (formerly known as 350 Bull) edge. This soft, rounded corner bead provides a unique style that is a safer alternative to 90-degree corner beads, great for schools and healthcare facilities.

### Installation Guide

#### Technical Specs

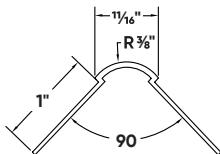

#### Setback: $\frac{1}{4}$ " Medium

Scan Below for Installation Video



#### Before Installation:

Measure, cut and dry fit the bead, leaving a  $\frac{1}{2}$ " gap at the floor.

#### Step 1:

Apply compound to the bead using a hopper.

#### Step 2:

Press the bead in place, applying pressure using the Pro Series Quad Roller.

#### Step 3:


Wipe the surface of the bead to clean any excess mud.

#### Step 4:

Finish with drywall compound.



#### Step 1:

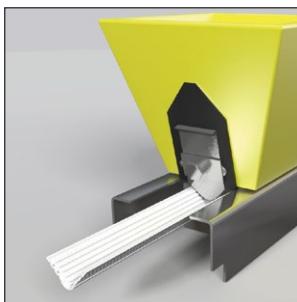

#### Step 2:



#### Step 3:



#### Step 4:

