




Super Seal-X

Many building codes have recently evolved to include requiring firestop materials around windows/mullions. With its flexible bubble gasket, Super Seal-X – a fire rated spin on Trim-Tex's acclaimed Super Seal Tear Away® L Bead – is the cleanest, quickest way to seal off windows from the spread of fire, smoke and sound. Available in two colors, pink and black, to suit a variety of needs.

Installation Guide

Technical Specs

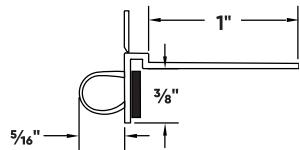

Scan Below for Installation Video



Before Installation:

Ensure there is a $\frac{3}{8}$ " gap between the drywall edge and adjacent surface. Measure, cut and dry fit the bead.

Step 1:

Coat the bead with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.


Step 3:

Staple every 6"-8" using $\frac{1}{2}$ " staples.

Step 4:

Finish with drywall compound. Remove tear-off strips prior to sanding.

Step 1:

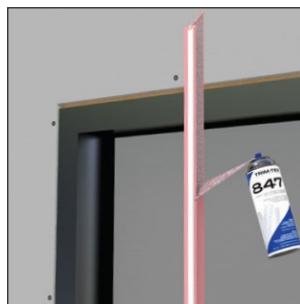

Step 2:



Step 3:



Step 4:

