

# Table of Contents

---

|   |       |
|---|-------|
| APPROVED DETAILING COMPONENTS             | 3     |
| ADDITIONAL TREMCO MATERIALS               | 4     |
| GENERAL                                   | 4-5   |
| DELIVERY AND JOB SITE STORAGE             | 6     |
| FRAMING                                   | 6     |
| PANEL CUTTING AND APPLICATIONS            | 7-8   |
| SOFFIT CONSTRUCTION                       | 8     |
| BOARD DETAILING                           | 9     |
| IN PLANE BOARD JOINTS                     |       |
| INSIDE CORNERS                            |       |
| OUTSIDE CORNERS                           | 10    |
| OUTSIDE CORNERS – DYNAMIC 100 SEALANT     |       |
| OUTSIDE CORNERS – LIQUID APPLIED FLASHING |       |
| OUTSIDE CORNERS – SELF ADHERED MEMBRANE   |       |
| EXPANSION/CONTROL JOINTS                  | 11-12 |
| PROGLAZE ETA CONNECTIONS                  |       |
| BRAKE METAL AND SEALANT                   |       |
| PENETRATIONS                              | 13    |
| NON-RATED WALL PENETRATIONS               |       |
| ROUGH OPENINGS                            | 13-18 |
| ROUGH OPENINGS – DYNAMIC 100 SEALANT      |       |
| ROUGH OPENINGS – EXOAIR 110AT             |       |
| ROUGH OPENINGS – LIQUID APPLIED FLASHING  |       |
| NAIL FLANGE – DYNAMIC 100 SEALANT         |       |
| NAIL FLANGE – EXOAIR 110AT                |       |
| NAIL FLANGE – LIQUID APPLIED FLASHING     |       |
| TRANSITIONS                               | 18    |
| ADJACENT SUBSTRATES                       |       |
| REPAIR INSTRUCTIONS                       | 19-21 |
| CLEAN UP                                  | 22    |
| SELECTION GUIDE                           | 22-23 |
| AVAILABLE DETAILS                         | 23    |

# Installation Instructions

## APPROVED DETAILING COMPONENTS

- 1.1** Dymonic® 100 (green) – A high-performance, medium-modulus, low-VOC, UV stable, non-sag polyurethane sealant that can be used for detailing fasteners, board joints, around penetrations, as angle beads in transition areas, in control/expansion joints with break metal, for terminating ExoAir 110AT, and under all the Vulken Coating Systems and TREMproof Waterproofing membranes.
- 1.2** Spectrem® 1 (purple) – An ultra-low modulus, high-performance, one-part moisture curing silicone joint sealant used to adhere Proglaze ETA Connections to the Securock ExoAir 430 Panel. Spectrem 1 should never be used underneath any membrane or sealant unless adhesion has been verified.
- 1.3** ExoAir® Primer – A VOC-compliant adhesive formulated to promote adhesion to the exposed gypsum core of the exterior sheathing prior to the application of sealant or flashing.
- 1.4** Proglaze® ETA Connections – A pre-engineered silicone material used as a transition membrane for expansion joints between the Securock ExoAir 430 Panels. It is comprised of a flat singled ribbed silicone extrusion that is adhered to the panel with Spectrem 1 (purple) silicone sealant.
- 1.5** ExoAir 110AT – A 22-mil composite impermeable membrane that is comprised of 16 mils of butyl and 6 mils of HDPP facer. It can be used as the membrane or as a detailing accessory of an air barrier system. ExoAir 110AT when installed properly as a system will provide the requirements of an air barrier: air impermeable, continuity, structural integrity and durability.
- 1.6** Securock® ExoAir Reinforcing Mesh – A mesh that is fully embedded in ExoAir 230 in light orange for transition areas.
- 1.7** ExoAir 230 (light orange) – A fluid- applied, synthetic, vapor-permeable air barrier designed for use in commercial construction applications. It can be sprayed, rolled or trowel-applied to common substrates. ExoAir 230 can be used as an air barrier membrane on adjacent substrates such as concrete or CMU, and can also be used in conjunction with Securock ExoAir Reinforcing Mesh as a transition material.

## ADDITIONAL TREMCO MATERIALS

- 2.1** TREMDrain – Drainage is incorporated to enhance the performance of the overall waterproofing system and reduce the amount of hydrostatic pressure. It is represented in the below-grade detail with TREMproof Waterproofing.
- 2.2** TREMproof Waterproofing – System of products used to effectively keep the water out of a structure. The water-proofing system can provide the protection, durability and continuity required.
- 2.3** Vulkem Coating Systems – System of high-performance concrete coatings to extend the longevity of concrete structures.
- 2.4** Tremco® Epoxy Primer – Tremco Epoxy Primer is a two-component (1:1) primer used as a compatible tie-in to create connectivity between the Securock ExoAir Panel and the TREMproof below-grade waterproofing membranes or Vulkem urethane coatings.
- 2.5** ExoAir LEF – A single-component, moisture-curing, gun-grade polyurethane foam that is used to insulate and act as a bond breaker around penetrations.
- 2.6** Tremco materials can be purchased through local Tremco distribution. Please contact us at 800.321.7906.

## GENERAL

- 3.1** This panel shall be installed in accordance with GA-253 Application of Gypsum Sheathing, ASTM C1280 Standard Specification for Application of Exterior Gypsum Panel Products for Use as Sheathing and the requirements of USG and Tremco published literature.
- 3.2** The prevention of water intrusion during panel installation process is critical. Promptly detail all joints, corners, fenestrations, penetrations and fasteners and use temporary terminations at the end of each day's work.
- 3.3** A pre-construction meeting with all parties involved in the overall building envelope shall be held prior to any installation activities. This meeting is crucial and will ensure that installation sequencing, system connectivity and product compatibility are properly addressed.
- 3.4** The system is comprised of the Securock® ExoAir® 430 Panel and system components, such as Dymonic 100 (green), Spectrem 1 (purple) sealant, Proglaze ETA connections and ExoAir 110AT. Please see the complete list of approved detailing components in Section 1 for product selection.
- 3.5** Ensure substrates are clean, dry and free of dust or debris that could prevent adhesion of sealant.
- 3.6** This product is not approved for use as a nail base.

- 3.7** Details and requirements pertaining to framing and application limitations shall be controlled by the cladding, structural or fire-resistant-rated system, and must be approved by the design professional of record.
- 3.8** A job standard or mock-up should be designed and built on-site for reference during pre-construction meetings and during installation operations. The Standard should be constructed using the same materials, techniques and sequencing expected on the project to establish a definitive expectation of the final system.
- 3.9** Details for construction for a specific assembly to achieve a required fire resistance shall be obtained from reports of fire resistance tests, engineering evaluations or listings from recognized fire-resistance laboratories.
- 3.10** Where sound control is required, details of construction shall be in accordance with an acoustical test report of an assembly that has met the required acoustical value(s).
- 3.11** Details of construction shall be in accordance with test report(s) of an assembly that has met required air and water barrier performance criteria.
- 3.12** Where resistance to racking shear and/or transverse wind load is required, system design capacities shall be obtained from USG published literature, engineering evaluations and test reports of a specific assembly where mandated by local code requirements.
- 3.13** Manage sequence of installation of the Securock ExoAir 430 Panel and detailing components with other trades and systems to ensure continuity and compatibility. Once the building is enclosed, by whatever means, care should be taken to prevent excess moisture/humidity buildup on interior side of the Securock ExoAir 430 Panel.
- 3.14** System components require that the panel be clean, dry and sound before installation. Connect the panel to adjacent parts of the building envelope such as the roof membrane, below-grade wall, window and curtain wall systems, and other parts of the building envelope.
- 3.15** Apply ExoAir Primer to all exposed gypsum core prior to application of sealant or flashing.
- 3.16** The techniques involved may require modifications to accommodate jobsite conditions. USG and Tremco recognize that site-specific conditions, weather patterns, contractor preferences and membrane detailing may require deviation or alteration from these prescribed installation procedures. When such circumstances exist on a project, the local Sales Representative or Technical Services must be contacted for assistance and approval as required.
- 3.17** This document provides the basic and typical instructions for the installation of Securock ExoAir 430 System to qualify for the Securock ExoAir 430 Warranty. Jobsite-specific details require the review and approval of a local Sales Representative or Technical Services.
- 3.18** Always wear appropriate personal protective equipment when handling and installing glass mat panels, such as gloves, safety glasses, hearing protection and a NIOSH-approved dust mask.

## DELIVERY AND JOB SITE STORAGE

**4.1** All materials shall be delivered in their original unopened packages and stored in an enclosed shelter providing protection from damage and exposure to the elements.

## FRAMING

**5.1** Securock ExoAir 430 Panel shall be installed on either wood or steel framing. The framing system shall be sized and designed to meet the requirements of the intended application

**5.2** The maximum spacing for framing members is 24" o.c.

**5.3** Framing shall be straight and true, attached securely following accepted engineering practices and as required for the intended design.

**5.4** The surfaces to which abutting edges or ends of the panels are to be attached shall not be less than 1¼" for steel framing, and 1½" for wood framing.

**5.5** Bearing surfaces shall not be less than  $\frac{5}{8}$ " for internal corners or angles.

**5.6** Framing members shall be installed so the surface will be in an even plane, unless otherwise specified, after the panel(s) has been applied. The fastening surface shall not vary more than  $\frac{1}{8}$ " from the plane of the faces of adjacent framing members.

**5.7** If wood blocking is desired in steel stud construction for setting windows, doors, etc., position dimensional lumber flush with exterior surface of steel stud and mechanically anchor every 12" o.c. Minimum dimensional size of wood blocking to be nominal 2x4 lumber.

## PANEL CUTTING AND APPLICATIONS

- 6.1** Securock ExoAir 430 Panel may be applied with long dimensions parallel or perpendicular to framing members, orange side to exterior. Panel orientation may be governed by local code, or by the requirements of shear or fire-rated construction. Consult local codes and site-specific construction documents prior to construction to ensure such requirements are met for every assembly.
- 6.2** Securock ExoAir 430 Panel shall be cut to size by scoring the panel face with a utility knife, or by sawing. Separate by snapping the panel away from the score line to fracture the core, and then by scoring the back mat with a utility knife. If a power saw is used, a cordless, low rpm saw will generate less airborne debris than a corded power saw.
- 6.3** The cut edges and ends of the panel shall be trimmed to obtain neat-fitting joints and flush with framing edges in rough opening if panel is used in rough opening.
- 6.4** Holes for pipe penetrations, fixtures or other small openings shall be scored on the orange face side before removing the cutout with a saw or special tool designed for this purpose.
- 6.5** Where Securock ExoAir 430 Panels meet projecting surfaces, the panel shall be scribed and cut neatly.
- 6.6** All vertical ends and edge joints shall abut over the centers of framing members and shall be offset a minimum of one framing bay between adjacent rows of panels.
- 6.7** Panel joints shall be offset a minimum of 4" from the edge of any opening.
- 6.8** Panels shall be detailed at openings to prevent any water intrusion beyond the membrane of the panel.
- 6.9** Center panel joints on framing members. Fit panels closely at edges and ends but do not force the panels together. Gaps between boards shall not exceed  $\frac{1}{8}$ ". Gaps greater than  $\frac{1}{8}$ " but less than  $\frac{1}{2}$ " shall be filled with Dymonic 100 (green) as fill material prior to detailing board joint in section 8. If gap exceeds  $\frac{1}{2}$ ", panel must be repositioned or repaired per repair instructions listed in section 24.
- 6.10** Hold panels in firm contact with framing members and secure with fasteners as specified.
- 6.11** Fasteners shall be driven so the head is seated flush to the membrane of the panel surface without breaking or punching through the surface. Wafer or modified truss head fasteners shall be driven so the underside of the head is flush against the panel surface without breaking or punching through the surface.
- 6.12** Fasteners shall be driven without stripping the fastener or the framing member around the screw shank. Should a fastener miss or strip out of the framing member, DO NOT remove the fastener; an additional fastener shall be properly installed minimum 1" and maximum 2" from damaged area.

**6.13** Fasteners shall be located not less than  $\frac{3}{8}$ " and not more than 1" from the ends and edges of the panel and shall be placed 8" maximum o.c.

**6.14** Fasteners can be either bugle or wafer head.

**6.15** All fastener heads shall be detailed after installation with minimum  $\frac{1}{16}$ " thickness (60 mils) and  $\frac{3}{4}$ " minimum diameter quantity of Dymonic 100 (green) sealant.

**6.16** Unless superseded by a more stringent specification, the minimum requirements for panel fasteners shall be as follows:  
**FASTENER SPECIFICATION**  
Corrosion Resistance: 48 hour per ASTM B 117  
Head Diameter: 0.325"  
Shank: #6  
Minimum length:  $1\frac{5}{8}$ " for wood installations.  $1\frac{1}{4}$ " for steel installations.

**6.17** Supplementary use of a panel adhesive to adhere the panel to the framing will strengthen the connection and bridge minor irregularities between the panel and the framing. The use of an adhesive, however, will not reduce the number of fasteners required by the specification. For optimal bond, apply adhesive in accordance with the adhesive manufacturer's instructions. Care should be taken so excess adhesive does not contaminate board joints. Framing must be free from oil and dirt, and panel must be clean and dry.

## **SOFFIT CONSTRUCTION**


**7.1** The roof must be dried in prior to horizontal installation of panels in all soffit applications.

**7.2** Maximum fastener spacing for soffits is 8" o.c.

## BOARD JOINTS


### IN PLANE BOARD JOINTS - DETAIL 12969

- 8.1 Ensure board joints are in compliance with section 6.9.
- 8.2 For in plane board joints apply and tool Dymonic 100 (green) sealant ensuring minimum overlap of  $\frac{3}{4}$ " onto each panel at a  $\frac{1}{16}$ " (60 mils) thickness.
- 8.3 For intersections of vertical and horizontal board joints, caution should be taken to not remove or disturb existing sealant when overlapping.
- 8.4 Feather sealant on horizontal joints out onto panel.

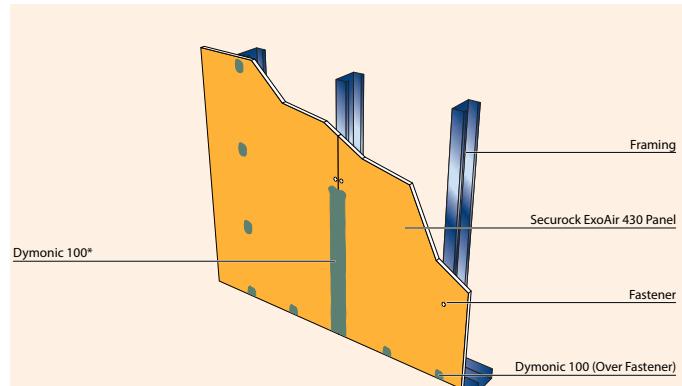

### INSIDE CORNERS - DETAIL 12885

- 9.1 Ensure boards joints are in compliance with section 6.9.
- 9.2 Install minimum  $\frac{1}{2}$ " wide bond breaker tape centered on joint.
- 9.3 Apply  $\frac{1}{2}$ " bead of Dymonic 100 (green) sealant bead over bond breaker tape.
- 9.4 Tool to achieve cove bead, minimum  $\frac{1}{4}$ " bond beyond edge of bond breaker tape to panel surface on each side of joint.

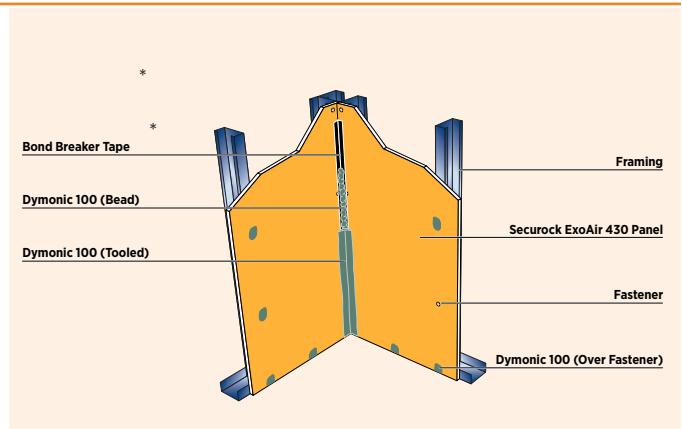


*\*Spectrem 1 is an alternative to Dymonic 100, but cannot be used with an adhesively-applied cladding.*

## OUTSIDE CORNERS - THREE OPTIONS (REFER TO PAGE 22 FOR SELECTION GUIDANCE)

### OUTSIDE CORNERS - DYMONIC 100 SEALANT - DETAIL 12885


- 10.1 Ensure boards joint are in compliance with section 6.9.
- 10.2 Apply a continuous bead of Dymonic 100 (green) sealant in a zigzag pattern or a straight bead on each side of the joint. Tool Dymonic 100 sealant over the corner joint so that sealant grips the Securock ExoAir 430 membrane a minimum of 1" on both sides. Ensure there are no holes or gaps in the sealant and feather it on both sides. Using a mil gauge, ensure that a minimum of 40 wet mils have been applied; if not, reapply sealant to achieve 40 wet mils.

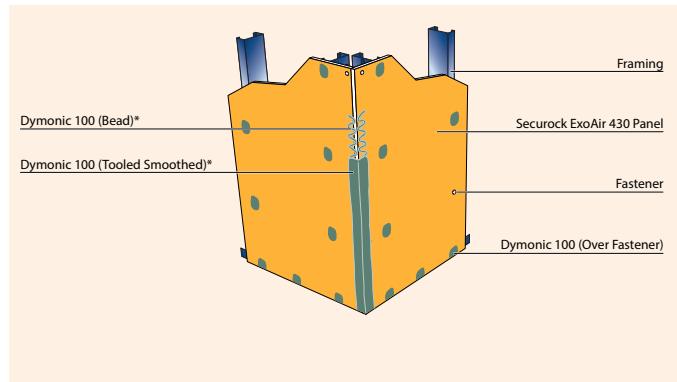

*\*Spectrem 1 is an alternative to Dymonic 100, but cannot be used with an adhesively-applied cladding.*


### OUTSIDE CORNERS - FLUID-APPLIED FLASHING - DETAIL 12886

- 11.1 Ensure boards joint are in compliance with section 6.9.
- 11.2 Prime any exposed gypsum core with ExoAir Primer.
- 11.3 Apply Securock ExoAir Reinforcing Mesh to the outside corner centered with 3" on each side of the corner.
- 11.4 Apply at least 50 wet mils of ExoAir 230 (orange) membrane over mesh, overlapping min 1/2" past edge of mesh. Ensure mesh is fully encapsulated; if not, reapply ExoAir 230 membrane.

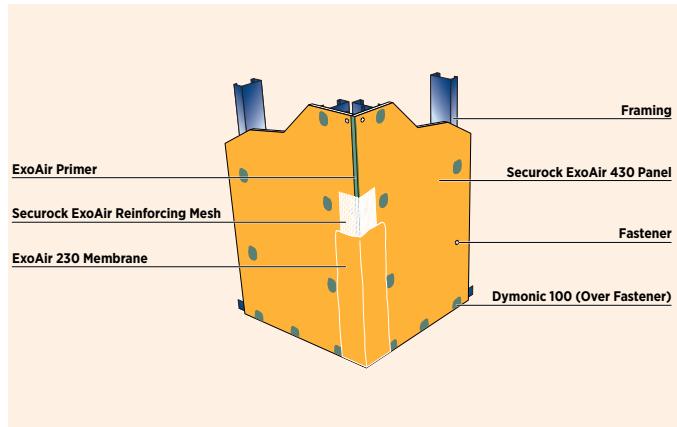

### OUTSIDE CORNERS - SELF-ADHERED MEMBRANE - 15838

- 12.1 Ensure boards joint are in compliance with section 6.9.
- 12.2 Apply the ExoAir 110AT to the outside corner centered with a minimum 3" on each side of the corner. Once positioned properly, remove the backing and smooth and press firmly into place. Mechanically roll to smooth out any fish mouths or air pockets in the membrane.
- 12.3 All ExoAir 110AT laps must lap a minimum of 2".
- 12.4 Terminate with Dymonic 100 (green) on any horizontal edge not oriented to shed water or at the end of the day's work.

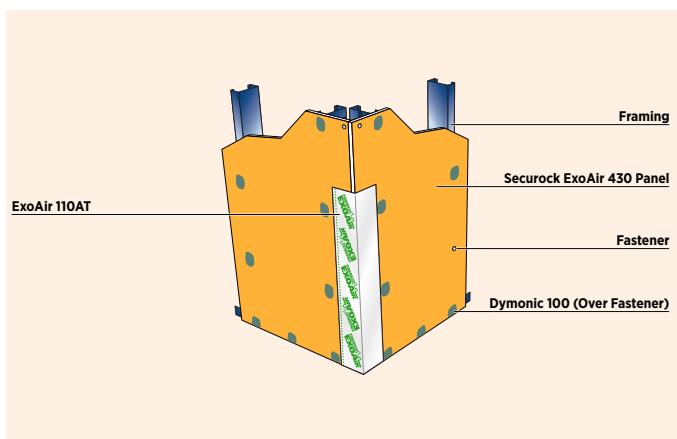

## EXPANSION / CONTROL JOINTS - REFER TO PAGE 22 FOR SELECTION GUIDANCE


**13.1** The design and placement of control joints is the responsibility of the design professional of record.

**13.2** Locate all control joints as per cladding system requirements, or in accordance with ASTM C1280 Standard Specification for Application of Gypsum Panel Products for Use as Sheathing, whichever is more stringent.

## EXPANSION / CONTROL JOINTS - PROGLAZE ETA CONNECTIONS - DETAIL 12888

**14.1** Friction fit closed cell backer rod flush with the surface of the Securock ExoAir 430 Panel.

**14.2** Bonding of Proglaze ETA component is achieved with continuous and interconnecting bedding beads of Spectrem 1 (purple) silicone sealant. Apply Spectrem 1 (purple) to the edges of the Securock ExoAir 430 Panel. Provide 1" wide continuous bedding along edges of the Proglaze ETA adhered to the Securock ExoAir 430 Panel membrane surface and within overlaps of lineals of the Proglaze ETA. Assure that Proglaze ETA is centered over gap and sufficient sealant is applied to achieve the 1" bedding bead. Using a hand-held seam roller, lightly roll press the Proglaze ETA to firmly bed, rolling toward its edge to force some sealant out, creating a slight bleed, and then tool the excess sealant back over the top of the Proglaze ETA.

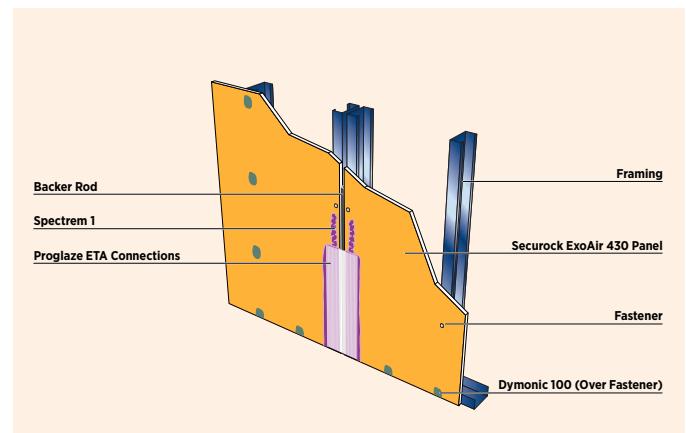

**14.3** Preplan installation to minimize splicing of Proglaze ETA. When splicing is required, provide a minimum 1" overlap of the Proglaze ETA. Installation should begin at bottom of joint following typical construction practices of proper shingle effect of the overlap for vertical joints. For horizontal joints connected to vertical control joints, horizontal joint shall be detailed first then lapping vertical joint over top.

**EXPANSION / CONTROL JOINTS - BRAKE METAL AND SEALANT - DETAIL 13127**

**15.1** Joint to be studded out with panel terminating at outside edge of stud.


**15.2** Brake metal shall be minimum 26 gauge aluminum or stainless steel with minimum 1" x 1" legs.

**15.3** On one side of the joint, apply  $\frac{1}{4}$ " bead of Dymonic 100 (green) sealant  $\frac{1}{8}$ " from edge of panel.

**15.4** Angle brake metal over sealant pressing tight to corner and mechanically attached with minimum 1" fasteners every 12" o.c. through face.

**15.5** Install brake metal on other side of joint in the same manner.

**15.6** Friction fit closed cell backer rod into joint, recess  $\frac{1}{4}$ " to  $\frac{1}{2}$ " from face of panel. Install Dymonic 100 (green) sealant over backer rod. Fill the joint completely with sealant at a proper width-to-depth ratio, and tool flush to ensure intimate contact of sealant with joint walls. For complete installation instructions, download data sheet from [tremcosealants.com/products/dymonic](http://tremcosealants.com/products/dymonic).

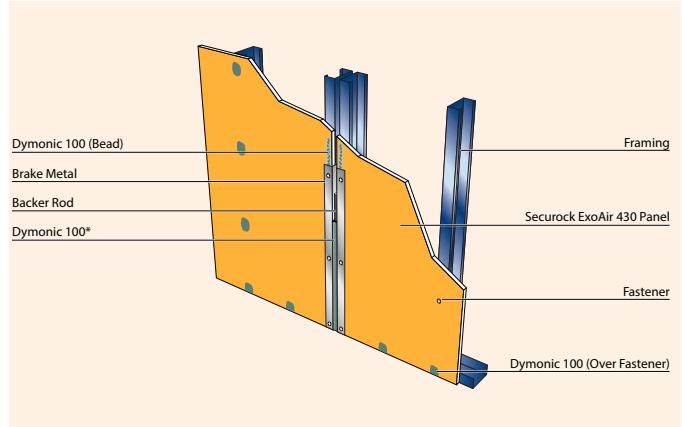

*\*Spectrem 1 is an alternative to Dymonic 100, but cannot be used with an adhesively-applied cladding.*

## PENETRATIONS - REFER TO PAGE 22 FOR SELECTION GUIDANCE


### NON-RATED WALL PENETRATIONS - DETAIL 12887

**16.1** This section is intended to provide guidance for preparing the rough opening for penetrations.

**16.2** The minimum annular space can be 0", (point contact to maximum  $\frac{5}{8}$ ", apply Dymonic 100 (green) sealant).

**16.3** If annular space exceeds  $\frac{5}{8}$ ", fill any gaps with ExoAir LEF or closed cell backer rod flush with the membrane surface of the panel. If necessary, allow LEF to cure and trim flush to the face of the panel.

**16.4** A cove bead of Dymonic 100 (green) sealant shall be installed that will maintain a minimum  $\frac{1}{4}$ " bond to both the membrane surface and the penetration.

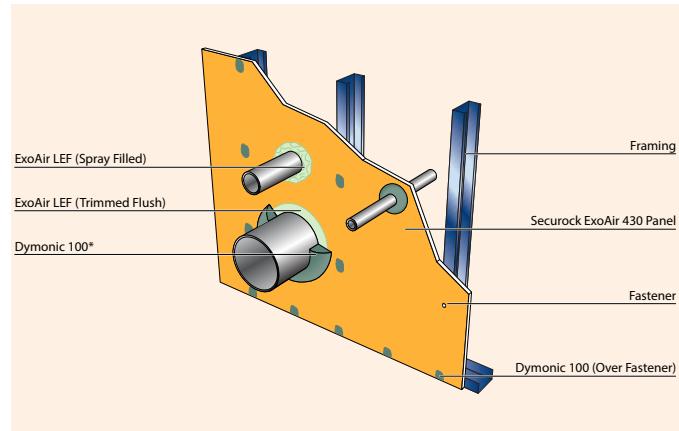


*\*Spectrem 1 is an alternative to Dymonic 100, but cannot be used with an adhesively-applied cladding.*

## ROUGH OPENINGS - REFER TO PAGE 22 FOR SELECTION GUIDANCE

**17.1** This section is intended to provide guidance for preparing the rough opening for fenestrations. Consult fenestration manufacturer's installation instructions for specific installation practices.

### ROUGH OPENINGS - DYMONIC 100 SEALANT - DETAIL 14135, 14113, 15839

**18.1** Apply a continuous bead of Dymonic 100 (green) sealant in all four corners of the rough opening where the sill, jamb and head meet. Apply a continuous bead of Dymonic 100 (green) sealant in a zigzag pattern or a straight bead around the face of the panel, the sill, jambs and head. Tool Dymonic 100 sealant over the four corners so that sealant grips the Securock ExoAir 430 membrane a minimum of 1" on all sides. Ensure there are no holes or gaps in the sealant and feather it out. Using a mil gauge, ensure that a minimum of 40 wet mils have been applied; if not, reapply sealant to achieve 40 wet mils.

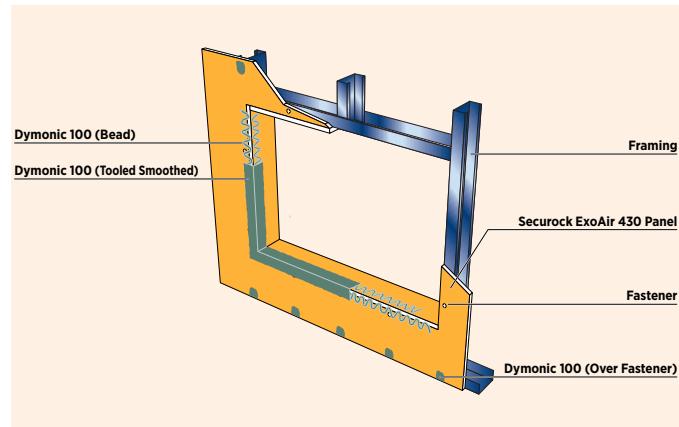

**18.2** In rough opening:


- Securock 430 panel - 1" minimum
- Wood buck - determined by window placement/design professional
- Steel framing - determined by window placement/design professional

**18.3** Tool Dymonic 100 (green) sealant on the face of the panel toward the rough opening ensuring the exposed core is covered with no holes or gaps. Feather sealant out onto the panel. Tool Dymonic 100 (green) sealant in the rough opening toward the face of the panel ensuring the exposed core is covered with no holes or gaps. Measure sealant to ensure that at least 40 wet mils have been applied; if not reapply Dymonic 100 (green) sealant.


**18.4** For specific window connections, contact the local Sales Representative or Technical Services.

#### ROUGH OPENINGS - EXOAIR 110AT - DETAIL 13010, 13683, 15840

**19.1** To properly install ExoAir 110AT, follow the steps in the order below. This allows for proper shingle effect of the membrane.

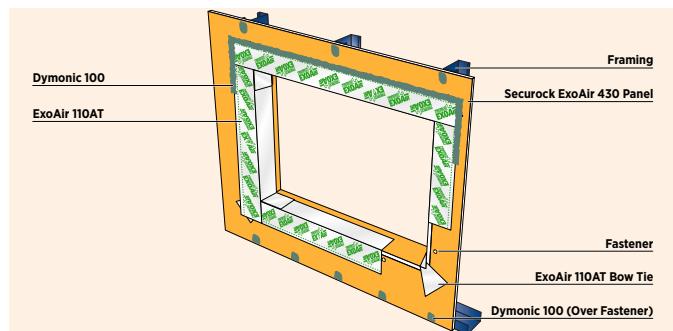

**19.2**

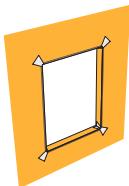


Cut ExoAir 110AT into four "bow tie" shapes. Length 6", top / bottom width 3", center 1". Remove backing and center the 1" section of the bow tie over face of joint. Press half onto the face of the panel and half into the rough opening. Mechanically roll to smooth out any fish mouths or air pockets in the membrane. Complete all four corners before applying flashing to the rough opening.

**19.3**




**Sill:** Cut a strip of ExoAir 110AT 6" longer than the length of the sill's opening. For example, a 36" sill will require a 42" strip of ExoAir 110AT. Fold the strip in half lengthwise. Make a 3" cut along the fold at each end so that you have two flaps. This will allow the sheet to be easily positioned into the rough opening and on to the exterior face of the panel.

Position the strip of ExoAir 110AT lengthwise on the sill so that the fold is on the front edge of the jamb and the flaps meet at both intersections of the sill and jambs. Press one flap on each side up into the rough opening in the jamb; then fold the membrane onto the exterior face of the panel covering the bow tie. Once positioned properly, remove the backing, smooth and press into place. Mechanically roll to smooth out any fish mouths or air pockets in the membrane.

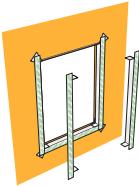**19.4**

Jambs: Cut a strip of ExoAir 110AT 6" longer than the height of the jambs' opening. Make a 3" cut along the fold at each end so that you have two flaps. Apply the flashing on both jambs in the same fashion as used on the sill, this time adhering one flap up into the rough opening of the head; then fold the membrane onto the exterior face of the panel covering the bow tie. Once positioned properly, remove the backing and smooth and press into place. Mechanically roll ExoAir 110AT into place to smooth out any fish mouths or air pockets in the membrane.

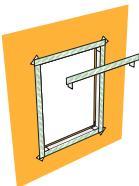**19.5**

Head: Cut a strip of ExoAir 110AT 6" longer than the length of the head's opening. Cut the ends as instructed in 9.3.2 Apply the flashing on the head in the same fashion as used on the sill and jamb, this time adhering one flap down into the rough opening of each jamb; then fold the membrane on to the exterior face of the panel covering the bow tie. Once positioned properly, remove the backing and smooth and press into place. Mechanically roll to smooth out any fish mouths or air pockets in the membrane.

**19.6**

All ExoAir 110AT must lap a minimum of 2".

**19.7**

Apply a  $\frac{1}{16}$ " thick, 1" wide bead of Dymonic 100 (green) sealant to top horizontal edge of ExoAir 110AT and extend 6" down the jambs on both sides.

**19.8**

For specific window connections, contact the local Sales Representative or Tremco Technical Services.


## ROUGH OPENINGS – FLUID-APPLIED FLASHING - DETAIL 12787, 13684, 15841

**20.1** Apply ExoAir Primer to all exposed gypsum core prior to application of sealant or flashing.

**20.2** Gaps in excess of 1/8 need to be detailed with Dymonic 100.

**20.3** Install reinforcing mesh and apply 50 wet mils of ExoAir 230 and overlap minimum 3 $\frac{1}{2}$ " onto each side. Allow ExoAir 230 (light orange) sealant to cure. Ensure mesh is fully encapsulated; if not reapply ExoAir 230 fluid flashing.

**20.4** For specific window connections, contact the local Sales Representative or Technical Services.

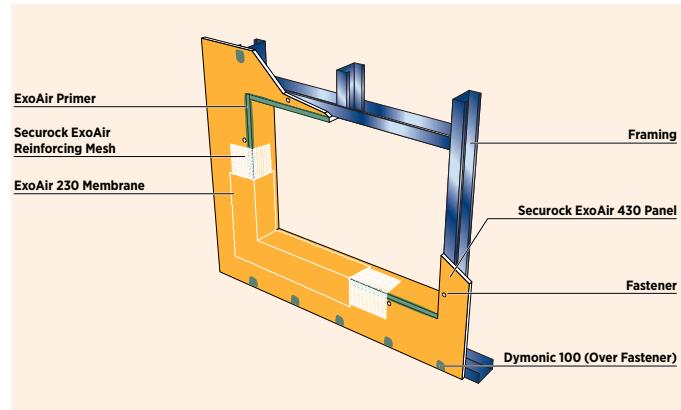

**NAIL FLANGE - DYMONIC 100 SEALANT - DETAIL 15843, 14133, 14114**


**21.1** Refer to page 13, section 18.1, 18.2 and 18.3.

**21.2** Press window into wet sealant and mechanically fasten to structure.


**21.3** Immediately prior to installing the flanged window, apply generous bead of Dymonic 100 (green) around the rough opening placed in such a way so that the fasteners penetrate through the wet sealant and fasten to the structure.


**21.4** Apply a generous bed of Dymonic 100 (green) sealant completely covering (minimum  $\frac{1}{2}$ " overlap) all fasteners, feathering out beyond the flange onto the


**21.5** Apply a continuous bead of Dymonic 100 (green) sealant in all four corners of the rough opening where the sill, jamb and head meet. Apply a continuous bead of Dymonic 100 (green) sealant in a zigzag pattern or a straight bead around the face of the panel, the sill, jambs and head. Tool Dymonic 100 sealant over the four corners so that sealant grips the Securock ExoAir 430 membrane a minimum of 1" on all sides. Ensure there are no holes or gaps in the sealant and feather it out. Using a mil gauge, ensure that a minimum of 40 wet mils have been applied; if not, reapply sealant to achieve 40 wet mils.

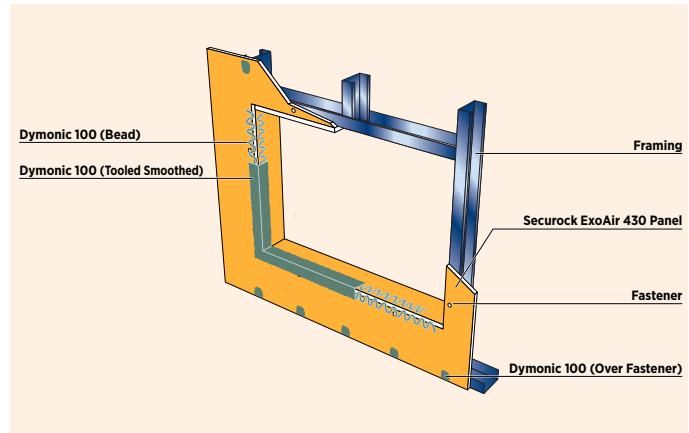
**NAIL FLANGE - EXOAIR 110AT - DETAIL 15847, 15844, 15842**

**22.1** To properly install ExoAir 110AT, follow the steps in the order below. This allows for proper shingle effect of the membrane.

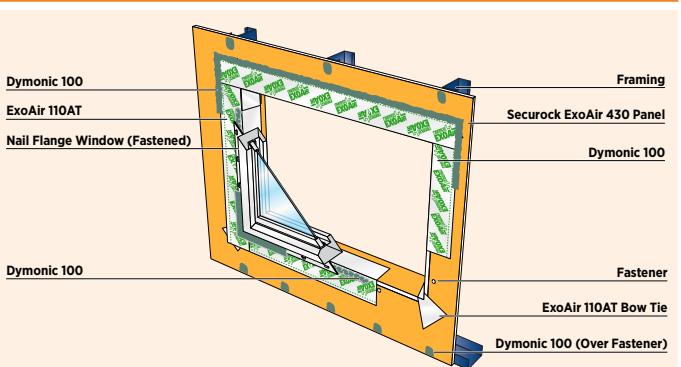


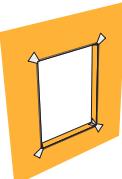**22.2**  Cut ExoAir 110AT into four "bow tie" shapes. Length 6", top / bottom width 3", center 1". Remove backing and center the 1" section of the bow tie over face of joint. Press half onto the face of the panel and half into the rough opening. Mechanically roll to smooth out any fish mouths or air pockets in the membrane. Complete all four corners before applying flashing to the rough opening.

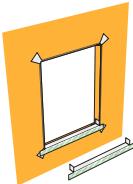
**22.3**

**Sill:** Cut a strip of ExoAir 110AT 6" longer than the length of the sill's opening. For example, a 36" sill will require a 42" strip of ExoAir 110AT. Fold the strip in half lengthwise. Make a 3" cut along the fold at each end so that you have two flaps. This will allow the sheet to be easily positioned into the rough opening and on to the exterior face of the panel.

Position the strip of ExoAir 110AT lengthwise on the sill so that the fold is on the front edge of the jamb and the flaps meet at both intersections of the sill and jambs. Press one flap on each side up into the rough opening in the jamb; then fold the membrane onto the exterior face of the panel covering the bow tie. Once positioned properly, remove the backing, smooth and press into place. Mechanically roll to smooth out any fish mouths or air pockets in the membrane.

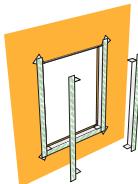**22.4**

**Jambs:** Cut a strip of ExoAir 110AT 6" longer than the height of the jambs' opening. Make a 3" cut along the fold at each end so that you have two flaps. Apply the flashing on both jambs in the same fashion as used on the sill, this time adhering one flap up into the rough opening of the head; then fold the membrane onto the exterior face of the panel covering the bow tie. Once positioned properly, remove the backing and smooth and press into place. Mechanically roll ExoAir 110AT into place to smooth out any fish mouths or air pockets in the membrane.

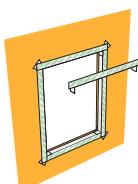**22.5**

**Head:** Cut a strip of ExoAir 110AT 6" longer than the length of the head's opening. Cut the ends as instructed in 9.3.2. Apply the flashing on the head in the same fashion as used on the sill and jamb, this time adhering one flap down into the rough opening of each jamb; then fold the membrane on to the exterior face of the panel covering the bow tie. Once positioned properly, remove the backing and smooth and press into place. Mechanically roll to smooth out any fish mouths or air pockets in the membrane.

**22.6**

All ExoAir 110AT laps must lap a minimum of 2".

**22.7**

Apply a  $\frac{1}{4}$ " thick, 1" wide bead of Dymonic 100 (green) sealant to top horizontal edge ExoAir 110AT and extend 6" down the jambs on both sides.

**22.8**

Immediately prior to installing the flanged window apply a continuous 1" wide by  $\frac{1}{8}$ " thick bead of Dymonic 100 (green) sealant around rough opening placed in such a way so that the fasteners penetrate through the wet sealant and fasten to the structure.

**22.9**

Apply generous bead of Dymonic 100 (green) sealant, completely covering (minimum  $\frac{1}{2}$ " overlap) all fasteners, feathering out beyond the flange onto the flashing a minimum  $\frac{1}{4}$ ".

**NAIL FLANGE - FLUID-APPLIED FLASHING - DETAIL 15845, 13686, 15846**


**23.1** Apply ExoAir Primer to all exposed core prior to application of sealant or flashing.

**23.2** Install reinforcing mesh and apply 50 wet mils of ExoAir 230 (light orange) and overlap minimum 3" onto each side. Allow ExoAir 230 membrane to cure. Ensure mesh is fully encapsulated; if not reapply ExoAir 230 membrane.

**23.3** Immediately prior to installing the flanged window, apply a continuous 1" wide by  $\frac{1}{8}$ " thick bead of Dymonic 100 (green) around rough opening. Place in such a way, that the fasteners penetrate through the wet sealant and fasten to the structure.

**23.4** Press window into wet sealant and mechanically fasten to structure.


**23.5** Apply generous bead of Dymonic 100 (green) sealant completely covering (minimum  $\frac{1}{2}$ " overlap) all fasteners, feathering out beyond the flange onto the panel a minimum  $\frac{1}{4}$ ".

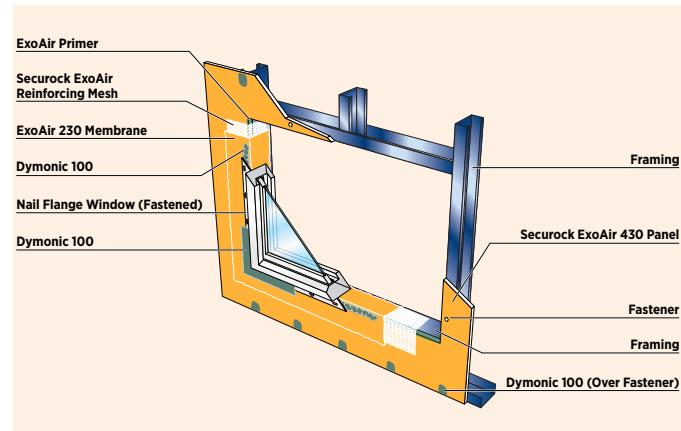
**TRANSITIONS**
**ADJACENT SUBSTRATES - DETAIL 13577**

**24.1** Dissimilar material connections need to be properly detailed. These steps below are intended to maintain the continuity between the Securock ExoAir 430 Panel and dissimilar materials with gaps 1" or less. For instruction on gaps with anticipated movement refer to section 13. For joints wider than 1" contact Tremco Technical Services.

**24.2** Fill joint completely with Dymonic 100 (green) sealant and tool flush. Dymonic 100 (green) does not have to cure before applying ExoAir 230.

**24.3** Apply 70 wet mils of ExoAir 230 (light orange) and overlap a minimum 3" onto the Securock ExoAir panel. Allow ExoAir 230 (light orange) to cure. Continue with Tremco field-applied air barrier system.

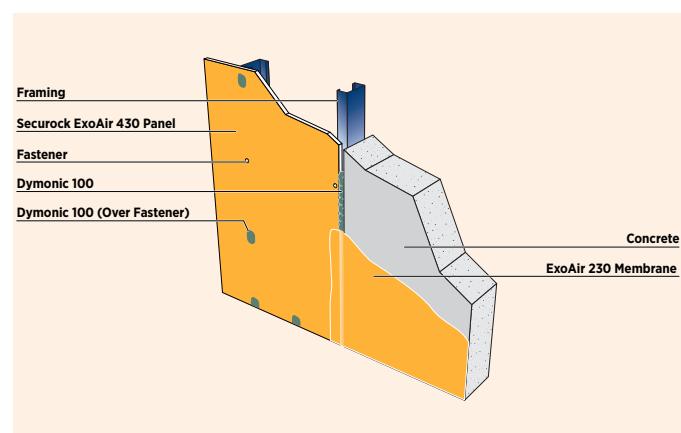


## REPAIR INSTRUCTIONS


**25.1** It is imperative to air barrier performance that the air barrier membrane applied to the board face not be compromised in any way. Compromises to the air barrier membrane can result from scratches, knife cuts, holes made in the panel or fastener penetration and withdrawal. If the air barrier membrane is compromised, the following procedures shall be followed to re-establish the air barrier membrane. If damage to either side of the panel compromises its structural integrity, the entire panel will need to be replaced.

### SURFACE DAMAGE

**25.2**

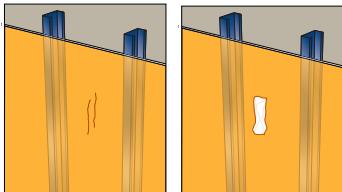


**A:** Scratches or knife cuts to the membrane on the face side of the panel shall be repaired with a 40 mil application of Dymonic 100 (green) sealant.

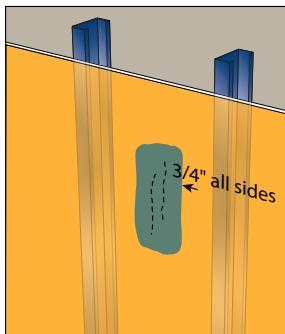


**B:** Apply a 40 wet mill of Dymonic 100 (green) sealant over the damaged area extending 2" on all sides.

Spectrem 1 is an alternative to Dymonic 100, but cannot be used with an adhesively-applied cladding.

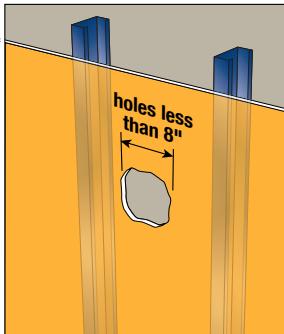
**25.5**

### OPENINGS & GAPS


**A:** For openings or gaps smaller than 8" in any direction, the panel shall be repaired as follows. From another piece of Securock ExoAir 430 Panel, cut a section larger than the damaged area to be used as the repair piece. Place the cut piece over the damaged area ensuring that it covers all damage. Trace around the repair piece and cut, using a knife or jigsaw, along the marking creating a hole in the damaged panel. When cutting the panel ensure that the gaps between repair piece and the damaged board shall not exceed  $\frac{1}{8}$ ".

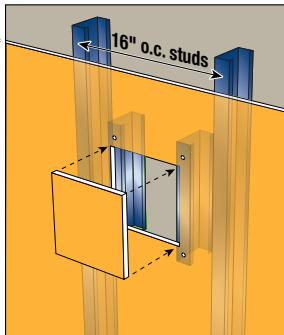


**B:** Use sections of drywall steel track to support the repair piece and fasten using screws. Ensure all surfaces are clean, dry and free of dust or debris.

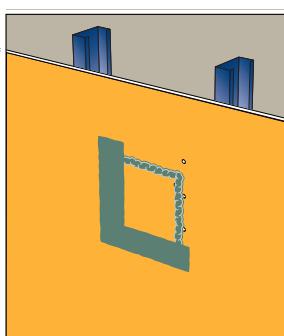


**C:** Caulk all gaps with Dymonic 100 (green) sealant, completely filling the gaps and tool smooth.

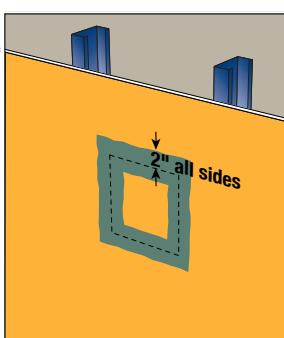


**D:** Apply Dymonic 100 (green) sealant at 40 mil thickness over the entire surface of the repair patch extending 2" beyond the gaps on all sides.

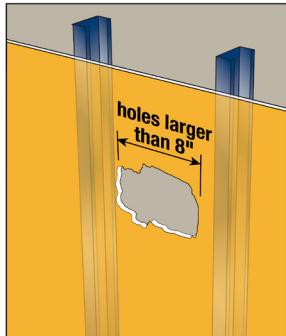**26.6**


**A:** For openings or gaps larger than 8" in any direction, the panel shall be repaired as follows.

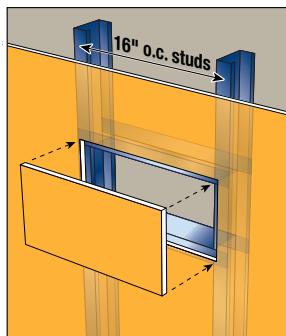

**B:** Cut the panel back to the framing on parallel sides. Cut a piece of Securock ExoAir 430 Panel to tightly fit into the opening and secure to framing with screws. Gaps between boards shall not exceed  $\frac{1}{8}$ ". Ensure all surfaces are clean, dry and free of dust or debris.

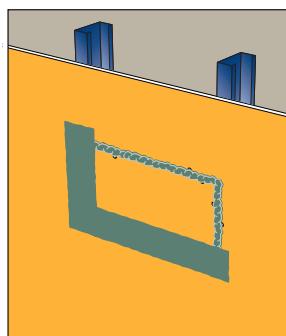

**C:** Caulk all gaps with Dymonic 100 (green) sealant, completely filling the gaps and tool smooth.

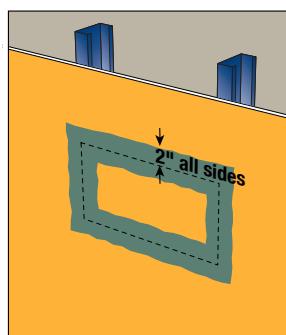

**D:** Apply Dymonic 100 (green) sealant at 40 mil thickness over the entire surface of the repair patch and extending 2" beyond the gaps on all sides.

## CLEAN UP

- 27.1** Leftover material shall be removed from the job site.
- 27.2** Waste material shall be disposed of in a safe manner and in compliance with site, local, state and/or federal requirements.
- 27.3** Securock ExoAir 430 Panel shall be covered by an exterior cladding and is not intended for long-term exposure. Panels shall not be exposed to the elements for more than 12 months after it has been installed.

## SELECTION GUIDE: DETAILS & CRITICAL CONNECTIONS

This tool is intended to help understand the material vs labor cost of the above construction scenarios and outline the ideal application.

## MATERIAL REFERENCE GUIDE


| DETAIL                    | DYMONIC 100                     | EXOAIR 110AT | EXOAIR 230 | PROGLAZE ETA | SPECTREM 1 |
|---------------------------|---------------------------------|--------------|------------|--------------|------------|
| Rough Openings            | X                               | X            | X          |              | X          |
| Outside Corners           | X                               | X            | X          |              | X          |
| Inside Corners            | X                               |              |            |              | X          |
| Board Joints              | X                               |              |            |              | X          |
| Fastener Heads            | X                               |              |            |              | X          |
| Penetrations              | X                               |              |            |              | X          |
| Expansion Joints          | X                               |              |            |              | X          |
| Below Grade**             | X                               |              |            |              |            |
| Roof/Parapet**            |                                 |              | X          |              |            |
| Adjacent Material Joints  | X                               |              |            |              |            |
| Adjacent Material Surface |                                 |              | X          |              |            |
| Window Connections        | Contact Local Tremco Sales Rep. |              |            |              |            |

## NOTES

| DETAIL  | OPTION                                   | LABOR COST | MATERIAL COST | IDEAL APPLICATION  |
|---|--|------------|---------------|--|
| Rough opening & outside corner                              | Dymonic 100                              | \$         | \$\$          | Rapid installation on smaller openings/outside corners   |
|   | ExoAir 110AT& Dymonic 100                | \$\$       | \$\$\$        | Can dry-in building fast, not waiting for sealants/ coating to cure  |
|   | ExoAir Primer, ExoAir Mesh, & ExoAir 230 | \$\$\$     | \$            | Multiple steps (primer, mesh, & EA230). Very rapid installation good for long runs, parapet, can mobilize sprayer. |
|   | Spectrem 1                               | \$         | \$\$\$        | High performance sealant, cannot be used with adhesively applied claddings.  |
| Board joints, fastener heads, inside corners & penetrations | Dymonic 100                              | \$         | \$\$          | Rapid installation   |
|   | Spectrem 1 (outside corner only)         | \$         | \$\$\$        | High Performance sealant, cannot be used with adhesively applied claddings   |
| Expansion joint   | Proglaze ETA                             | \$         | \$\$\$        | Unparalleled movement, fast installation   |
|   | Brake Metal                              | \$\$\$     | \$\$          | Cost effective material  |
| Below-Grade Waterproofing**                                 | Dymonic 100                              | \$         | \$\$\$        | Requires ExoAir Epoxy Primer base, see installation detail   |
|   | ExoAir Primer, ExoAir Mesh, & ExoAir 230 | \$         | \$            | Requires Dymonic 100 for gaps greater than 1/8". Very rapid installation good for long runs, can mobilize sprayer  |

## AVAILABLE DETAILS

See list of available details on [securockexoair.com](http://securockexoair.com)

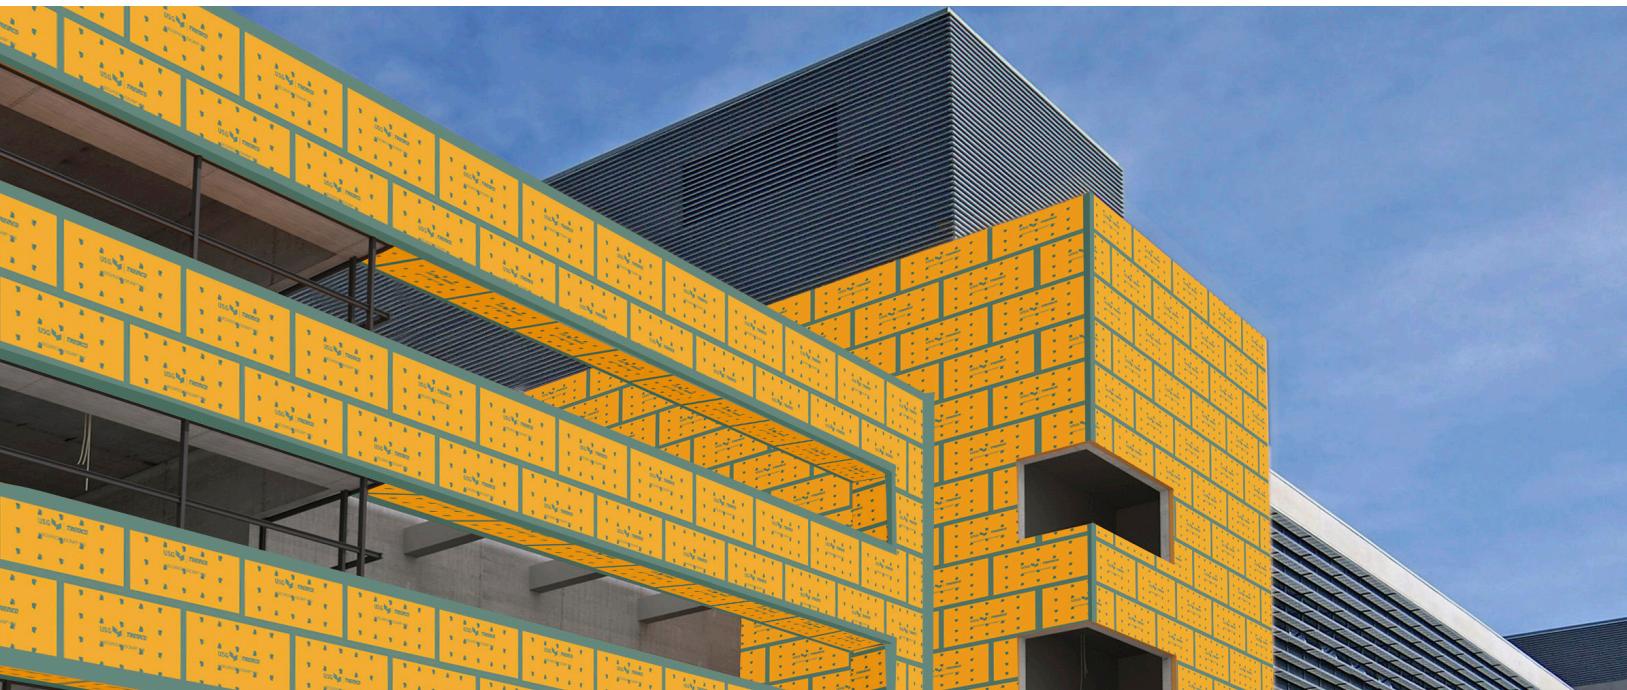



#### Product information

See [securockexoair.com](http://securockexoair.com) for the most up-to-date product information.

The product is warranted to be free of defects in materials at the time of shipment, but the manufacturer makes no warranty as to appearance or color. Since methods of application and on-site conditions are beyond the manufacturer's control and can affect performance, the manufacturer makes no other warranty, expressed or implied. **ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED**

**WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY DISCLAIMED.**

The manufacturer's sole obligation with respect to any product that fails to conform to the warranty set forth herein shall be, at its sole option, to replace or refund the purchase of the quantity of product proven to be defective. In no event shall the manufacturer be liable for any special, incidental or consequential damages in connection with the product or its use.

#### Note

Products described here may not be available in all geographic markets.

#### Safety First

Follow good safety/industrial hygiene practices during installation. Wear appropriate personal protection equipment.

Read SDS and literature before specification and installation.

#### Notice

We shall not be liable for incidental and consequential damages, directly or indirectly sustained, not for any loss caused by application of these goods not in accordance with current printed instructions or for other than the intended use. Our liability is expressly limited to replacement of defective goods. Any claim shall be deemed waived unless made in writing to us within thirty (30) days from the date it was or reasonably should have been discovered.

Manufactured by  
United States Gypsum Company  
550 West Adams Street  
Chicago, IL 60661

USG Technical & Customer Support  
800 USG.4YOU (874-4968)  
[usg.com](http://usg.com)

Tremco Commercial  
Sealants & Waterproofing  
3735 Green Road  
Beachwood, OH 44122

Tremco Technical Support  
866-209-2404  
216-292-5181  
[tremcosealants.com](http://tremcosealants.com)

The trademarks USG, SECUROCK, the USG logo, and related marks are trademarks of USG Corporation or its affiliates.

The trademarks Dymonic, ExoAir, Proglaze, Spectrem and Tremco are trademarks of Tremco Incorporated.

BE102/7-17  
© 2017 USG Corporation and Tremco Incorporated.  
Printed in the USA

[p-e-i.com/reports.html](http://p-e-i.com/reports.html)

